

# *RTI Data Distribution Service*

## **Getting Started Guide**

### **Addendum for Embedded Systems**

Version 4.5



The Global Leader in DDS



© 2010-2011 Real-Time Innovations, Inc.  
All rights reserved.  
Printed in U.S.A. First printing.  
October 2011.

### **Trademarks**

Real-Time Innovations and RTI are registered trademarks of Real-Time Innovations, Inc. All other trademarks used in this document are the property of their respective owners.

### **Copy and Use Restrictions**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form (including electronic, mechanical, photocopy, and facsimile) without the prior written permission of Real-Time Innovations, Inc. The software described in this document is furnished under and subject to the RTI software license agreement. The software may be used or copied only under the terms of the license agreement.

### **Technical Support**

Real-Time Innovations, Inc.  
385 Moffett Park Drive  
Sunnyvale, CA 94089  
Phone: (408) 990-7444  
Email: [support@rti.com](mailto:support@rti.com)  
Website: <https://support.rti.com/>

# Contents

## 1 Addendum for Embedded Platforms

## 2 Getting Started on Embedded UNIX-like Systems

- 2.1 Building and Running a Hello World Example .....2-2
- 2.2 Configuring Automatic Discovery .....2-2

## 3 Getting Started on INTEGRITY Systems

- 3.1 Building the Kernel .....3-1
- 3.2 Building and Running a Hello World Example .....3-3
  - 3.2.1 Generate Example Code and Project File with rtiddsgen .....3-3
  - 3.2.2 Build the Publish and Subscribe Applications .....3-4
  - 3.2.3 Connect to the INTEGRITY Target from MULTI.....3-4
  - 3.2.4 Load the Application on the Target.....3-4
  - 3.2.5 Run the Application and View the Output .....3-5

## 4 Getting Started on VxWorks 6.x Systems

- 4.1 Building the Kernel .....4-1
- 4.2 Building and Running a Hello World Example .....4-2
  - 4.2.1 Generate Example Code and Makefile with rtiddsgen .....4-3
  - 4.2.2 Building and Running an RTI Data Distribution Service Application as a Kernel Task.....4-3
  - 4.2.3 Building and Running an RTI Data Distribution Service Application as a VxWorks Real-Time Process (RTP) .....4-5

## 5 Getting Started on VxWorks 653 Platform 2.x Systems

- 5.1 Setting up Workbench for Building DDS Applications .....5-2
- 5.2 Creating DDS Applications.....5-2
- 5.3 Running DDS Applications .....5-16



## Chapter 1 Addendum for Embedded Platforms

In addition to enterprise-class platforms like Microsoft Windows and Linux, *RTI® Data Distribution Service* supports a wide range of embedded platforms. This document is a companion to the *Getting Started Guide* especially for users of those platforms. It describes how to configure some of the most popular embedded systems for use with *RTI Data Distribution Service* and to get up and running as quickly as possible. The code examples covered in this document can be generated for your platform(s) using the *rtiddsgen* code generator that accompanies *RTI Data Distribution Service*, as described in the *Getting Started Guide* ([Generating Code with \*rtiddsgen\*](#) (Section 4.3.2.1)).

This document assumes at least minimal knowledge with the platforms it describes and is not a substitute for the documentation from the vendors of those platforms. For further instruction on the *general* operation of your embedded system, please consult the product documentation for your board and operating system.



## Chapter 2 Getting Started on Embedded UNIX-like Systems

This chapter provides instructions on building and running *RTI Data Distribution Service* applications on embedded UNIX-like systems, including QNX® and LynxOS® systems. It will guide you through the process of generating, compiling, and running a Hello World application on an embedded UNIX-like system by expanding on [Generating Code with rtiddsgen \(Section 4.3.2.1\) in the \*Getting Started Guide\*](#). Please read the following alongside that section.

In the following steps:

- ❑ All commands must be executed in a command shell that has all the required environment variables. For details, see [Set Up the Environment on Your Development Machine \(Section 3.1.1.1\) in the \*Getting Started Guide\*](#).
- ❑ You need to know the name of your target architecture (look in your `NDDSHOME/lib` directory). Use it in place of `<architecture>` in the example commands. For example, your architecture might be `'i86Lynx4.0.0gcc3.2.2'`.
- ❑ We assume that you have **gmake** installed. If you have **gmake**, you can use the generated makefile to compile. If you do not have **gmake**, use your normal compilation process. (Note: the generated makefile assumes the correct version of the compiler is already in your path and that `NDDSHOME` is set.)

---

## 2.1 Building and Running a Hello World Example

This section describes the basic steps for building and running an *rtiddsgen*-generated example on an embedded UNIX-like target.

1. Create a directory to work in. In this example, we use a directory called **myhello**.
2. In the **myhello** directory, create a file called **HelloWorld.idl** that contains a user-defined data type:

```
struct HelloWorld {
    string<128> msg;
};
```

3. Use the *rtiddsgen* utility to generate sample code and a makefile. Modify, build, and run the generated code as described in [Using Types Defined at Compile Time \(Section 4.3.2\) in the \*Getting Started Guide\*](#):

For C++:

```
rtiddsgen -language C++ -example <architecture> HelloWorld.idl
gmake -f makefile_HelloWorld_<architecture>
./objs/<architecture>/HelloWorld_subscriber
./objs/<architecture>/HelloWorld_publisher
```

For Java:

```
rtiddsgen -language Java -example <architecture> HelloWorld.idl
gmake -f makefile_HelloWorld_<architecture>
gmake -f makefile_HelloWorld_<architecture> HelloWorldSubscriber
gmake -f makefile_HelloWorld_<architecture> HelloWorldPublisher
```

**For Java users:** The generated makefile deduces the path to the java executable based on the `APOGEE_HOME` environment variable<sup>1</sup>, which therefore must be set in order to run the example applications.

---

## 2.2 Configuring Automatic Discovery

In most cases, multiple applications—whether on the same host or different hosts—will discover each other and begin communicating automatically. However, in some cases you must configure the discovery service manually. For example, on LynxOS systems, multicast is not used for discovery by default; you will need to configure the addresses it will use. For more information about these situations, and how to configure discovery, see [Automatic Application Discovery \(Section 4.1\) in the \*Getting Started Guide\*](#).

---

1. For example: `$(APOGEE_HOME)/lynx/pcc/ive/bin/j9`



## Chapter 3 Getting Started on INTEGRITY Systems

This chapter provides simple instructions on configuring a kernel and running *RTI Data Distribution Service* applications on an INTEGRITY system. Please refer to the documentation provided by Green Hills Systems for more information about this operating system.

This process has been tested on INTEGRITY 5.0.11 and assumes that applications are downloaded dynamically.

For more information on using *RTI Data Distribution Service* on an INTEGRITY system, please see the *RTI Data Distribution Service Platform Notes*.

The first section describes [Building the Kernel \(Section 3.1\)](#).

The next section guides you through the steps to build and run an `rtiddsgen`-generated example application on an INTEGRITY target: [Building and Running a Hello World Example \(Section 3.2\)](#).

Before you start, make sure that you know how to:

1. Boot/reboot your INTEGRITY target.
2. Get the serial port output of your target (using telnet, minicom or hyperterminal).

---

### 3.1 Building the Kernel

Before you start, you should be familiar with running a kernel on your target.

1. Launch MULTI.
2. Select **File, Create new project**.

- 
3. Choose the INTEGRITY Operating System and make sure the path to your INTEGRITY distribution is correct.
  4. Choose a processor family and board name.
  5. Click **Next**.
  6. Choose Language: **C/C++**.
  7. Project type: **INTEGRITY Kernel**.
  8. Choose a project directory and name.
  9. Click **Next**.
  10. In Kernel Options, choose at least: '**TCP/IP stack**'. Everything else can be left to default.
  11. In the Project Builder, you should see the following file:  
*<name of your project>\_default.ld* (under src/resource.gpj).
  12. Right-click the file and edit it; the parameters of interest are the following:

```
CONSTANTS
{
    __INTEGRITY_DebugBufferSize = 0x10000
    __INTEGRITY_HeapSize = 0x100000
    __INTEGRITY_StackSize = 0x4000
    __INTEGRITY_DownloadSize = 0x400000
    __INTEGRITY_MaxCoreSize = 0x200000
}
```

Note that most *RTI Data Distribution Service* applications will require the Stack-Size and HeapSize parameters to be increased from their default value. The values shown above are adequate to run the examples presented in this document.

13. Once you have changed the desired values, right-click the top-level project and select **Build**.
14. Run the new kernel on your target.

## 3.2 Building and Running a Hello World Example

This section describes the basic steps for building and running an *rtiddsgen*-generated example on an INTEGRITY target:

- [Generate Example Code and Project File with \*rtiddsgen\* \(Section 3.2.1\)](#)
- [Build the Publish and Subscribe Applications \(Section 3.2.2\)](#)
- [Connect to the INTEGRITY Target from MULTI \(Section 3.2.3\)](#)
- [Load the Application on the Target \(Section 3.2.4\)](#)
- [Run the Application and View the Output \(Section 3.2.5\)](#)

### 3.2.1 Generate Example Code and Project File with *rtiddsgen*

To create the example applications:

1. Create a directory to work in. In this example, we use a directory called **myhello**.
2. In the **myhello** directory, create a file called **HelloWorld.idl** that contains a user-defined data type:

```
struct HelloWorld {
    string<128> msg;
};
```

3. Use the *rtiddsgen* utility to generate sample code and a project file as described in [Generating Code with \*rtiddsgen\* \(Section 4.3.2.1\) in the \*Getting Started Guide\*](#). Choose either C or C++.

For C:

```
rtiddsgen -language C -example <architecture> HelloWorld.idl
```

For C++:

```
rtiddsgen -language ++C -example <architecture> HelloWorld.idl
```

In your **myhello** directory, you will see that *rtiddsgen* has created a number of source code files (described in Section 3.7 of the *User's Manual*), additional support files (not listed here), and a project file: **HelloWorld\_default.gpj**.

4. Edit the example code to modify the data as described in [Generating Code with \*rtiddsgen\* \(Section 4.3.2.1\) in the \*Getting Started Guide\*](#).

---

### 3.2.2 Build the Publish and Subscribe Applications

1. Launch MULTI.
2. Select **File, Open Project Builder** and choose the top-level project file generated by *rtiddsgen*, **HelloWorld\_default.gpj**.
3. Right-click the top-level project file in the Project builder and edit it to add the following line:

```
-os_dir=<the path to your INTEGRITY distribution>
```

**Note:** For Interpeak architectures: Also add the location of your Interpeak libraries:

```
-L<interpeak install dir>/libs
```

4. Save your changes.
5. Right-click the top-level project and **Build** the project. MULTI might ask you if you want to load the changes to your project, you should do so.

### 3.2.3 Connect to the INTEGRITY Target from MULTI

1. From the MULTI Launcher, click the **Connection** button and open the **Connect** option. Your mode should be **Download** (Download and debug application).
2. Create a custom connection with the following line:

```
rtserv -port udp@<ip address of your INTEGRITY target>
```

(You might be able to see the IP address of your target on the output of its boot sequence.)

You only have to create your connection once, MULTI will remember it.

3. Make sure your target has booted; *then* select **Connect**. You should see a new window with the Kernel Tasks running on your target.

### 3.2.4 Load the Application on the Target

1. In the task window, select **Target, Load module**.
2. Browse for your executables; there should be 3 of them in your project directory:
  - **HelloWorld\_publisherdd**
  - **HelloWorld\_subscriberdd**
  - **posix\_shm\_manager**

3. Load the **posix\_shm\_manager** first, it will appear in the **Tasks** window as a separate address space and start running by itself once loaded. It will allow you to use the shared memory transport on your target.

Note: The default *rtidsgen*-generated code tries to use shared memory, so unless you have manually disabled it, your application will crash if you do not load the shared memory manager before running the application.

4. Load the publisher, subscriber, or both. They should appear in separate address spaces in the **Tasks** window.

### 3.2.5 Run the Application and View the Output

1. Select the task called "Initial" in your application's address space in the **Tasks** window; you can either click the play button to run it, or click the debug button to debug it.

Note that with some versions of INTEGRITY, it is difficult to pass arguments to applications. Arguments can always be hard-coded in your application before compiling it. To quickly experiment with multiple runs of the application with different arguments, one option is to run your application within the debugger. Then you can set a breakpoint before the arguments are used and change them at that point.

2. From the **Tasks** window, select **Target, Show Target Windows**. This will show you the standard output of your target.

Some errors messages may still go through the serial port, so you should leave your serial port connection open and monitor it as well.

#### To reboot the target:

Go to your serial port connection monitor and type **'rset'**.



## Chapter 4 Getting Started on VxWorks 6.x Systems

This chapter provides simple instructions to configure a kernel and run *RTI Data Distribution Service* applications on VxWorks 6.x systems. Please refer to the documentation provided by Wind River Systems for more information on this operating system. See also the *RTI Data Distribution Service Platform Notes*.

This chapter will guide you through the process of generating, compiling, and running a Hello World application on vxWorks 6.x systems by expanding on [Generating Code with rtiddsgen \(Section 4.3.2.1\)](#) in the *Getting Started Guide*; please read the following alongside that section.

The first section describes how to build the kernel:

- ❑ [Building the Kernel \(Section 4.1\)](#)

The next section guides you through the steps to generate, modify, build, and run the provided example HelloWorld application on a VxWorks target:

- ❑ [Building and Running a Hello World Example \(Section 4.2\)](#)

---

### 4.1 Building the Kernel

Before you start, you should be familiar with running a kernel on your target.

1. Launch Workbench.
2. Select **File, New, VxWorks Image Project**
3. Give your project a name.
4. Choose the board support package according to your hardware.

- 
5. For the Tool chain, select **GNU**.
  6. For the Profile, select **PROFILE\_DEVELOPMENT**.  
Leave everything else at its default setting.
  7. For VxWorks 6.4 and below: Once the project is created, double-click **Kernel Configuration** and add at least the following modules:
    - **ZBUF Socket** (under **Network Components, Network Socket Components**)  
(The *RTI Data Distribution Service* libraries for VxWorks Kernel Mode use ZBUF sockets. If you do *not* add this module to the kernel, you will see undefined symbols when loading the *RTI Data Distribution Service* application on the target.)
    - **IGMP v4** (under **Network Components, Network Protocol Components, Network IPv4 Components**)  
This will enable multicast for the target.To add a module to the kernel, right-click **include**.  
Included modules have a dark blue box, modules not included have light blue box.
  8. For architectures with symmetric multiprocessor (SMP) support, add the module named "**\_\_thread variables support**" under **Operating System Components, Kernel Components**.<sup>1</sup>
  9. Compile the Kernel by right-clicking the project and selecting **Build project**.  
The Kernel and associated symbol file will be found under **<your project directory>/default/**.

---

## 4.2 Building and Running a Hello World Example

This section will guide you through the steps required to successfully run an *rtiddsgen*-generated example application on a VxWorks 6.x target, using kernel mode or RTP mode:

- Kernel Mode:** see [Section 4.2.2](#)
- RTP Mode:** see [Section 4.2.3](#)

---

1. In 4.5d the only architecture with SMP support is ppc604Vx6.7gcc4.1.2\_smp.



## 4.2.1 Generate Example Code and Makefile with rtiddsgen

To create the example applications:

1. Create a directory to work in. In this example, we use a directory called **myhello**.
2. In the **myhello** directory, create a file called **HelloWorld.idl** that contains a user-defined data type:

```
struct HelloWorld {  
    string<128> msg;  
};
```

3. Use the *rtiddsgen* utility to generate sample code and a makefile as described in [Generating Code with rtiddsgen \(Section 4.3.2.1\)](#) in the *Getting Started Guide*. Choose either C or C++.

**Note:** The architecture names for Kernel Mode and RTP Mode are different.

For C:

```
rtiddsgen -language C -example <architecture> HelloWorld.idl
```

For C++:

```
rtiddsgen -language C++ -example <architecture> HelloWorld.idl
```

For Java:

```
rtiddsgen -language Java -example <architecture> HelloWorld.idl
```

Edit the generated example code as described in [Generating Code with rtiddsgen \(Section 4.3.2.1\)](#) in the *Getting Started Guide*.

## 4.2.2 Building and Running an RTI Data Distribution Service Application as a Kernel Task

There are two ways to build and run your *RTI Data Distribution Service* application:

- [Using Command Line \(Section 4.2.2.1\)](#)
- [Using Workbench \(Section 4.2.2.2\)](#)

### 4.2.2.1 Using Command Line

1. Set up your environment with the **wrenv.sh** script in the VxWorks base directory.

- 
2. Build the Publisher and Subscriber modules using the generated makefile. This makefile will work out of the box on a Solaris host; you will have to modify the compiler and linker paths for Linux and Windows hosts. To use dynamic linking, remove the *RTI Data Distribution Service* libraries from the link objects.

(Note: steps 4, 5 and 6 can be replaced by establishing a telnet connection to the VxWorks target. In that case, Workbench does not need to be used and both the Host Shell and Target Console will be redirected to the telnet connection. Once in the C interpreter (prompt '->' in the shell) you can type 'cmd' and then 'help' for more information on how to load and run applications on your target.)

3. Launch Workbench.
4. Make sure your target is running VxWorks.
5. Connect to the target with the target manager and open a host shell (and a Target Console Tool to look at the output, both are found by right-clicking the connected target in the **Target Tools** sub-menu.)
6. In the host shell: if using static linking, load the single **.so** file produced by the build:

```
>cd "directory"  
>ld 1 < HelloWorld_subscriber.so
```

If using dynamic linking: to avoid unresolved symbols warnings, load the libraries first, in this order: **libniddscore.so**, then **libniddsc.so**, then **libniddscpp.so**; then load your **.so** file.

7. Run the **subscriber\_main** or **publisher\_main** function. For example:

```
>taskSpawn "sub", 255, 0x8, 150000, subscriber_main, 38, 10
```

In this example, 38 is the domain ID and 10 is the number of samples.

**Note:** If you plan on running more than one *RTI Data Distribution Service* application as a Kernel task (for example, a publisher and a subscriber), use dynamic linking to avoid symbol conflicts.

#### 4.2.2.2 Using Workbench

1. Using Workbench, create a new Downloadable Kernel Module Project, choose the **Managed build** option and the **PPC32gnu** architecture for a PowerPC target, or **PENTIUMgnu** for an i86 target.
2. Copy the source files and headers generated by *rtiddsgen* into the project directory.

3. Right-click the project in Workbench, then select **Refresh** to see the files.
4. Right-click the project and go to **Properties**, then go to **Build Properties**.
5. In the **Build Macros** tab:
  - Add to DEFINES: **-DRTI\_VXWORKS**
  - Add to CC\_ARCH\_SPEC: **-mlongcall** (only needed for PowerPC targets)
  - If you are use static linking:
    - Add to LIBPATH: **-L{your path to the RTI Data Distribution Service libraries, make sure they're the Kernel ones}**
    - Add to LIBS: **-lnddscppz -lnddscz -lnddscorz** (in that order)
    - (If you are using dynamic linking, there are no changes required to LIBPATH or LIBS.)
6. In the **Build Paths** tab, click **Generate**. *Make sure all the Substitute paths are unchecked.*
7. Click **Next**, then manually add the folders containing the *RTI Data Distribution Service* header files using the **Add Folder** option: **\$(NDDSHOME)/include** and **\$(NDDSHOME)/include/ndds**.
8. Click **Resolve All** and make sure there are no more **Unresolved Include Directives**.
9. Click **Apply** to save the changes, then click **OK** to exit the properties menu.
10. Right-click the project, then select **Build**.
11. Run the application as described starting in [Step 3 on page 4-4](#), except you should load **HelloWorld.out** instead of **HelloWorld\_subscriber.so** when you get to [Step 6 on page 4-4](#).

### 4.2.3 Building and Running an RTI Data Distribution Service Application as a VxWorks Real-Time Process (RTP)

There are two ways to build and run your *RTI Data Distribution Service* RTP application:

- [Using the Command Line \(Section 4.2.3.1\)](#)
- [Using Workbench \(Section 4.2.3.2\)](#)

---

#### 4.2.3.1 Using the Command Line

1. Generate the source files and the makefile with *rtiddsgen*.

**Note:** The architecture names for Kernel Mode and RTP Mode are different.

Please refer to the *RTI Data Distribution Service User's Manual* for more information on how to use *rtiddsgen*.

2. Set up your environment with the **wrenv.sh** script in the VxWorks base directory.
3. Build the Publisher and Subscriber modules using the generated makefile. This makefile will work out of the box on a Solaris host; you will have to modify the compiler and linker paths for Linux and Windows hosts.

(Note 1: steps 4 to 10 can be replaced by establishing a telnet connection to the VxWorks target. In that case, Workbench does not need to be used and both the Host Shell and Target Console will be redirected to the telnet connection. Once in the C interpreter (prompt '->' in the shell) you can type 'cmd' and then 'help' for more information on how to load and run applications on your target.)

(Note 2: if you want to dynamically link your RTP to the RTI libraries (VxWorks 6.3 and above only), make the following modifications the generated makefile:

```
LIBS = -L$(NDDSHOME)/lib/<architecture> -non-static -lnddscpp \  
      -lnddsc -lnddscore $(syslibs_<architecture>)
```

Then add to the **LD\_LIBRARY\_PATH** environment variable the path to your RTI libraries as well as the path to **libc.so.1** of your VxWorks installation to launch your RTP successfully.)

4. Launch Workbench.
5. Make sure your target is running VxWorks.
6. Connect to the target with the target manager and open a host shell and a Target Console Tool to look at the output. Both are found by right-clicking the connected target in the **Target Tools** sub-menu.
7. Right-click your target in the Target Manager window, then select **Run Real Time Process**.
8. Set the **Exec Path on Target** to the **HelloWorld\_subscriber.vxe** or the **HelloWorld\_publisher.vxe** file created by the build.
9. Set the arguments (domain ID and number of samples, using a space separator).  
A Stack size of 0x100000 should be sufficient. If your application doesn't run, try increasing this value.
10. Click **Run**.

### 4.2.3.2 Using Workbench

1. Create a new Real Time Process Project; make sure the **Managed build** option is checked and choose the **PPC32gnu** architecture for a PowerPC target, or **PENTIUMgnu** for an i86 target.
2. Copy the source files and headers generated by *rtiddsgen* into the project directory. There can only be one **main()** in your project, so you must choose between a subscriber or a publisher. If you want to run both, you will need to create 2 different projects.
3. Right-click the project in Workbench, then select **Refresh** to see the files.
4. Right-click the project and go to **Properties**, then select **Build Properties**.
5. In the **Build Macros** tab, add:
  - to **DEFINES**: **-DRTL\_VXWORKS**
  - to **CC\_ARCH\_SPEC**: **-mlongcall** (only needed on PowerPC targets)
  - to **LIBPATH**: **-L/{your path to the ndds libraries, make sure they are the RTP ones}**
  - to **LIBS**:
    - for static linking:
 

```
-lnddscppz -lnddscz -lnddscorez (in that order)
```
    - for dynamic linking (VxWorks 6.3 and above only):
 

```
-non-static -lnddscpp -lnddsc -lnddscore (in that order)
```
6. In the **Build Paths** tab, click **Generate**. *Make sure all the Substitute paths are unchecked.*
7. Click **Next**, then manually add the folders containing the *RTI Data Distribution Service* header files using the **Add Folder** option: **\$(NDDSHOME)/include** and **\$(NDDSHOME)/include/ndds**.
8. Click **Resolve All** and make sure there are no more Unresolved Include Directives
9. Click **Apply** to save the changes, then click **OK** to exit the properties menu.
10. Right-click the project, then select **Build**.
11. Run the application as described starting in [Step 4 on page 4-6](#).



# Chapter 5 Getting Started on VxWorks 653 Platform

## 2.x Systems

This chapter provides simple instructions on how to configure a kernel and run *RTI Data Distribution Service* applications on a VxWorks 653 Platform 2.x system. Please refer to the documentation provided by Wind River Systems for more information, as well as the *RTI Data Distribution Service Platform Notes*.

Developing a complete system typically involves the cooperation of developers who play the following principal roles:

- ❑ *A platform provider*, who develops the platform
- ❑ *An application developer*, who develops applications
- ❑ *A system integrator*, who designs and specifies the module, and integrates a set of applications with a platform to create a module

For more information on these roles, please see the *VxWorks 653 Configuration and Build Guide*.

This document assumes the above distribution of development responsibilities, with DDS being a part of the application. This document is targeted towards platform providers, application developers, and system integrators.

**For platform providers**, this document indicates what your system must provide to *RTI Data Distribution Service*. Platform providers must provide a platform that application developers will use to create the application. The provided platform must support worker tasks and the socket driver. For the actual list of components, refer to [Table 8.3, “Building Instructions for VxWorks 653 Architectures,”](#) on page 53 in the *Platform Notes*.

**For application developers**, this document describes how to create *RTI Data Distribution Service* applications. Application developers must use the platform provided by the platform provider. To create a DDS application, follow [Step 5 on page 5-11](#) to [Step 7 on](#)

---

[page 5-12.](#)

**For system integrators**, this document describes how to combine the platform from the platform provider, and the application from the application developer, and create the system to be deployed. System integrators must create an integration project using the module OS and partition OS provided by the platform provider, and the application provided by the application provider. To create a system capable of running DDS applications, the system integrator needs to create a ConfigRecord considering the requirements noted in [Step 2 on page 5-8.](#)

**For someone creating a DDS application**, this document provides an example from the ground up.

---

## 5.1 Setting up Workbench for Building DDS Applications

1. Install Workbench.
2. Copy the socket driver files from Wind River to each BSP of interest. For example, for sbc8641Vx653-2.3gcc3.3.2, copy the socket driver files into `$(WIND_BASE)/target/config/wrSbc8641d`.
3. Copy the socket library header files into `$(WIND_BASE)/target/h/netinet`. The file `in.h` will be replaced.

---


## 5.2 Creating DDS Applications

This section contains instructions for creating DDS applications for the sbc8641Vx653-2.3gcc3.3.2 platform. The procedure is the same for all VxWorks 653 platforms, but the actual values used in the configuration may vary.


1. Create an integration project with two partitions (one for the publisher, one for the subscriber). Follow the instructions from Wind River for doing this. The following screenshots will guide you through the process.




- a. Create a new Workbench project.

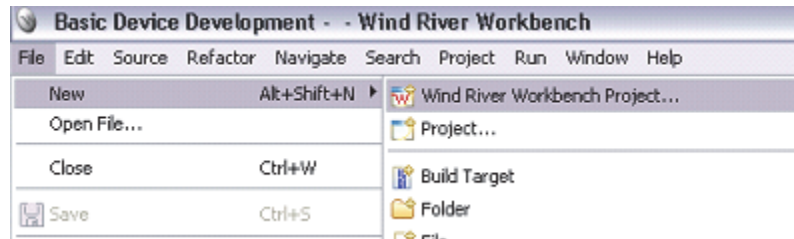


- b. For the Target operating system, select **VxWorks 653 2.3**.

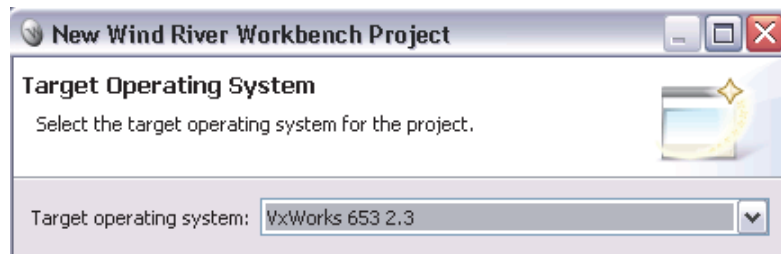


- c. For Build type, select **Integration Project**.

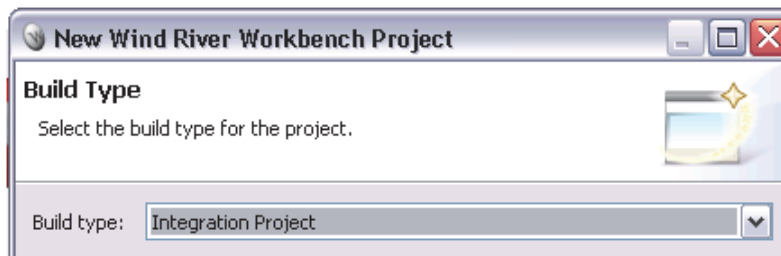



- d. Create a project named **helloWorld** in the workspace.

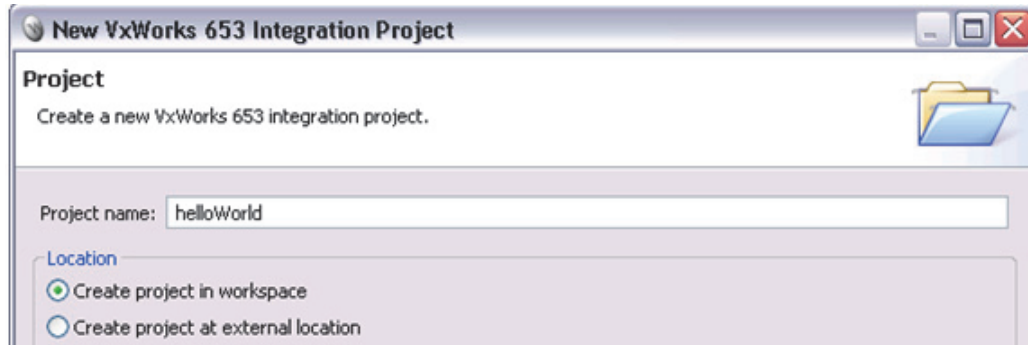


- e. Select the appropriate Board Support package. Make sure the debug Build spec is selected. This example assumes the **wrSbc8641d** board support package is selected.

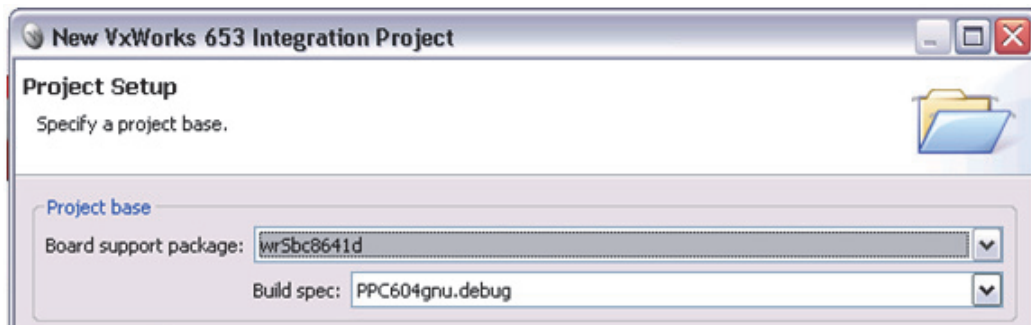


- f. Select the default options for adding the ConfigRecord, ModuleOS, and PartitionOS. Make sure the “Add a reference to the corresponding project” checkbox is selected.

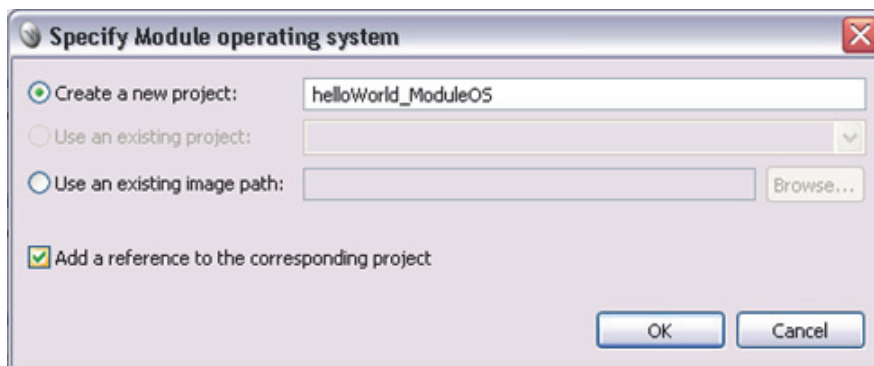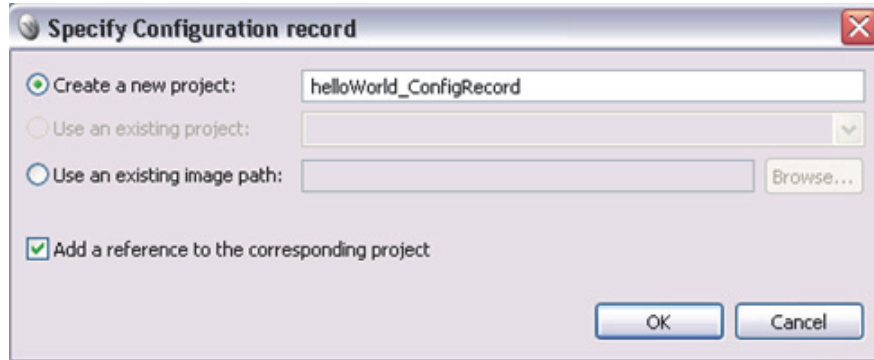

- 
- g. Create two partitions, **helloWorld\_publisher** and **helloWorld\_subscriber**, to create a DDS publisher and subscriber application, respectively. Make sure the “**Add a reference to the corresponding project**” checkbox is selected.

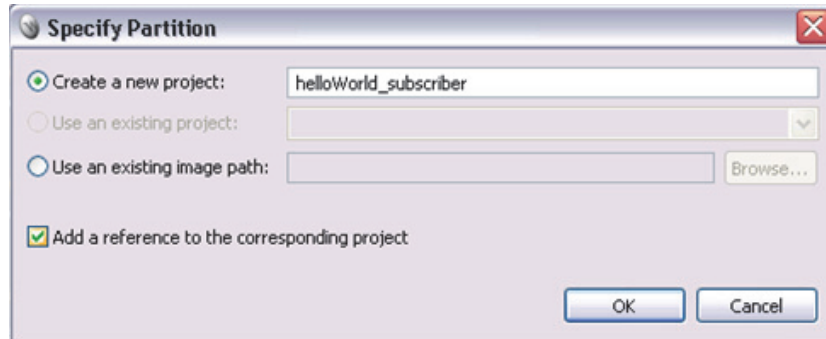


h. Now you are ready to create the Integration Project.

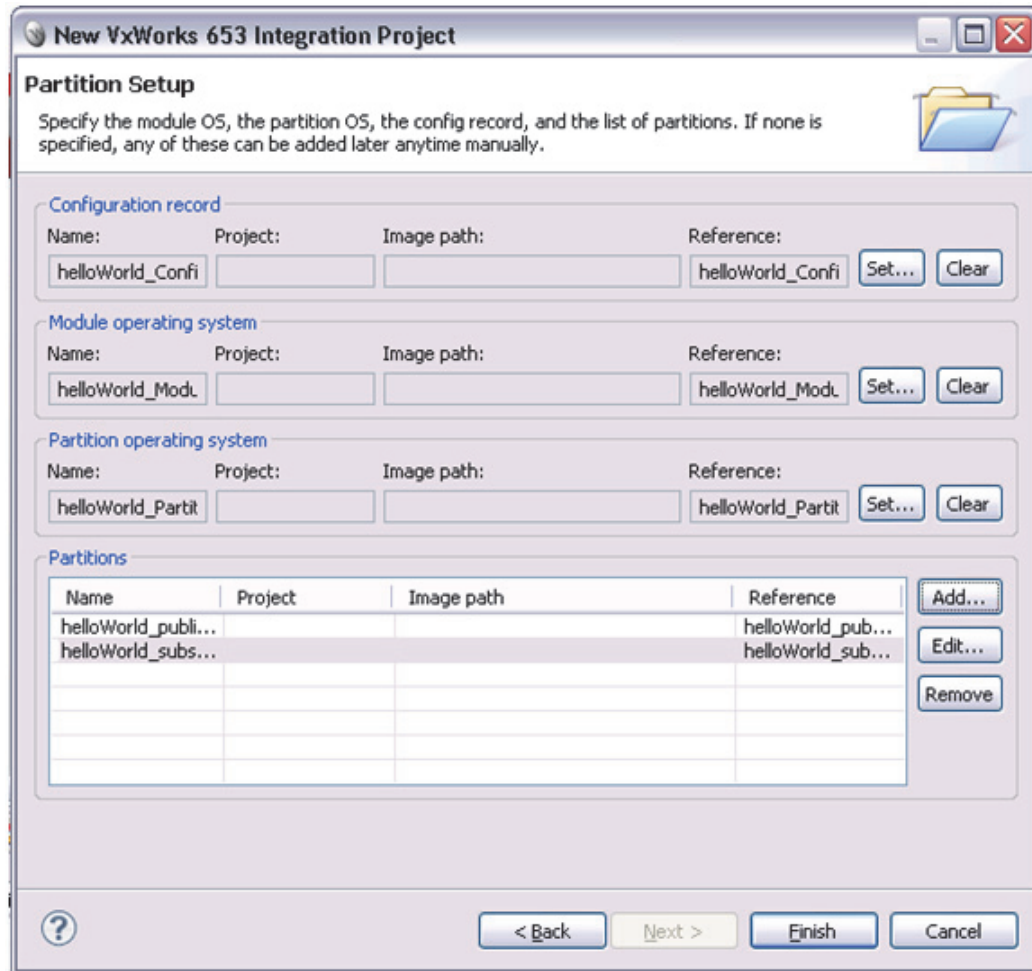

i. Click **Finish** to create the Integration project.

This will create an integration project with ConfigRecord, ModuleOS, PartitionOS and two partitions, helloWorld\_publisher and helloWorld\_subscriber.

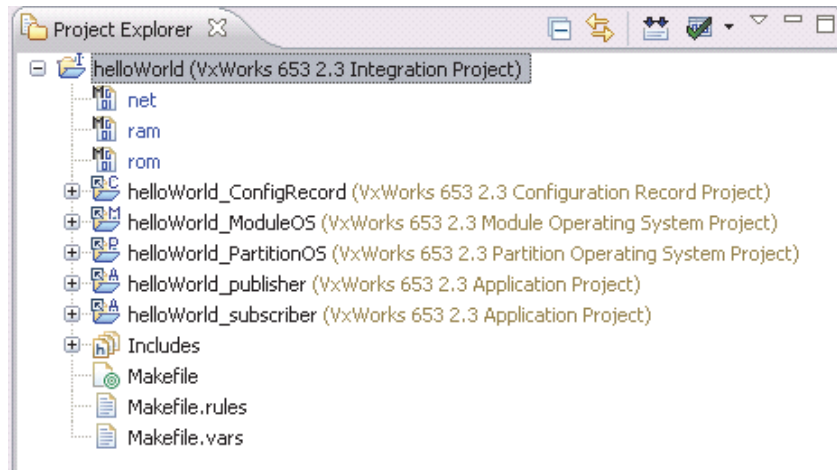


2. Open **helloWorld\_ConfigRecord->wrSbc8641d\_default.xml** and make the changes noted below. By default, the file opens in design mode. You may wish to switch to source mode, which makes it easier to copy and paste sections, which is required in later steps.

- a. Under Applications:

- i. Change the application name from `wrSbc8641d_part1` to **helloWorld\_publisher**.
- ii. Under MemorySize:

- (1). Change `MemorySizeText` to **0x450000**.
- (2). Change `MemorySizeRoData` to **0x90000**.
- (3). Remove `MemorySizePersistentData` and `MemorySizePersistentBss`.

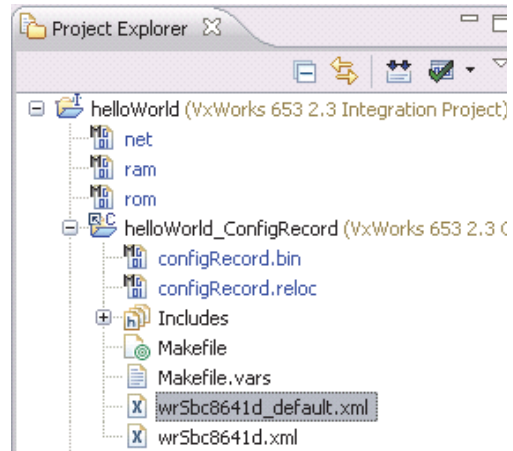

- (4). For C++ only:  
Change the MemorySize tag so it ends with '>' (not '/>').

Within MemorySize, add:

```
<AdditionalSection Name=".gcc_except_table"
  Size="0x2000" Type="DATA" />
```

Close MemorySize with `</MemorySize>`.

It should look like this when you are done (the actual values may be different):

```
<MemorySize
  MemorySizeBss="0x1000"
  MemorySizeText="0x4f0000"
  MemorySizeData="0x1000"
  MemorySizeRoData="0x90000">
  <AdditionalSection Name=".gcc_except_table"
    Size="0x2000" Type="DATA" />
</MemorySize>
```

- iii. Create a copy of the application `helloWorld_publisher` and rename it **helloWorld\_subscriber**.
- b. Under Partitions:
- i. Change the partition name from `wrSbc8641d_part1` to **helloWorld\_publisher**.
  - ii. Change the Application NameRef from `wrSbc8641d_part1` to **helloWorld\_publisher**.
  - iii. Under Settings, change RequiredMemorySize to `0x100000` and change numWorkerTasks to `10`.
  - iv. Create a copy of the partition application `helloWorld_publisher` and rename it **helloWorld\_subscriber**. Change its ID to `2` and its Application NameRef to **helloWorld\_subscriber**.
- c. Under Schedules:
- i. Rename PartitionWindow PartitionNameRef from `wrSbc8641d_part1` to **helloWorld\_publisher**.
  - ii. Create a copy of the PartitionWindow, and change **PartitionNameRef** to **helloWorld\_subscriber**.
  - iii. Add another PartitionWindow, with PartitionNameRef **"SPARE"** and Duration **0.05**. This partition window schedules the kernel, allowing time in the schedule for system activities like network communications.

---

iv. Optionally:

- (1). If you want only *one* of the applications to run (helloWorld\_publisher or helloWorld\_subscriber), then you only need a partition window for the one you want to run.
- (2). If you do not want the DDS application to run immediately when the system boots up, change the schedule ID to non-zero and add a SPARE schedule with ID 0.

d. Under HealthMonitor:

- i. In PartitionHMTable Settings, change TrustedPartition NameRef from **wrSbc8641d\_part1** to **helloWorld\_publisher**. This is an optional field, so it can even be removed from the configuration.
- ii. Optionally, change the ErrorActions from **hmDefaultHandler** to **hmDbgDefaultHandler**, in case you want the partitions to stop and not restart on exceptions.


e. Under Payloads:

- i. Change PartitionPayload NameRef from **wrSbc8641d\_part1** to **helloWorld\_publisher**.
- ii. Create a copy of the PartitionPayload, and change NameRef to **helloWorld\_subscriber**.

f. Save the changes to **wrSbc8641d\_default.xml**.

3. In helloWorld\_ModuleOS->Kernel Configuration:

- a. Include **hardware->peripherals->hard disks->socket I/O device [INCLUDE\_SOCKET\_DEV]**.
- b. Include **development tool components->debug utilities [INCLUDE\_DEBUG\_UTIL]**. This is needed to enable worker tasks.
- c. Optionally, include target-resident shell components, and any other components you want to include in the ModuleOS.
- d. Save the changes to Kernel Configuration.

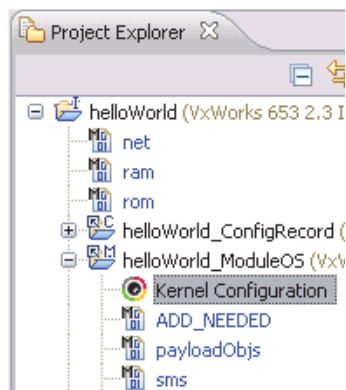


**Note:**

See the *Platform Notes (RTI\_DDS\_PlatformNotes.pdf)* for a complete list of required kernel components for each platform.



4. Build the target **helloWorld\_ModuleOS->ADD\_NEEDED**.

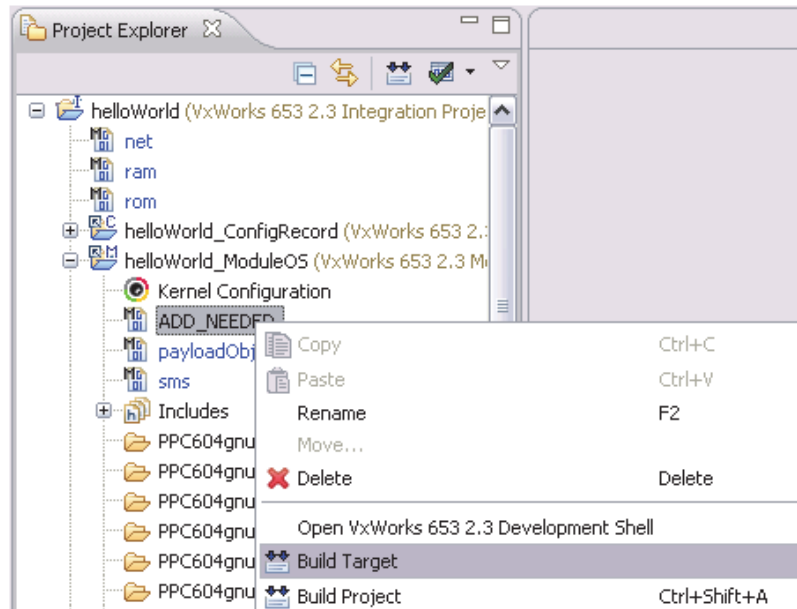

5. Generate example code with *rtiddsgen*.

- a. Create a directory to work in. In this example, we use a directory called **myhello**.
- b. In the **myhello** directory, create a file called **HelloWorld.idl** that contains a user defined data type:

```
struct HelloWorld {
    string<128> msg;
};
```

- c. Use the *rtiddsgen* utility to generate sample code and a makefile as described in [Generating Code with rtiddsgen \(Section 4.3.2.1\)](#) in the *Getting Started Guide*. Choose either C or C++.

For C:

```
rtiddsgen -language C -example <architecture> HelloWorld.idl
```


For C++:

```
rtiddsgen -language C++ -example <architecture> HelloWorld.idl
```

---


For this release, the supported architectures are **sbc8641Vx653-2.3gcc3.3.2** and **simpcVx653-2.3gcc3.3.2**.

- d. Edit the generated example code as described in [Generating Code with rtiddsgen](#) (Section 4.3.2.1) in the *Getting Started Guide*.
6. Import generated code into the application.
  - a. Right-click **helloWorld\_publisher** and select **Import**.
  - b. In the Import wizard, select **General->File System**, then click **Next**.
  - c. Browse to the myhello directory.
  - d. Select the generated files, except **HelloWorld\_subscriber**.
  - e. Import **sockLib.c** from the socket library into the project.
  - f. Right-click **usrAppInit.c** and delete it.
  - g. Repeat the same process for **helloWorld\_subscriber**, this time importing **HelloWorld\_subscriber** instead of **HelloWorld\_publisher**.
7. Configure properties for the application.
  - a. Right-click **helloWorld\_publisher** and select **Properties**.
    - i. Select **Build Properties** in the selection list on the left.
    - ii. In the Build Macros tab:
      - Add a new macro, **NDDSHOME**, and set its value to the location where *RTI Data Distribution Service* is installed.
      - Change the **BLACKBOX** value to **helloWorld\_publisher**.
    - iii. For C++ only:
      - In the Build Tools tab, select Build tool: **C++-Compiler**.
      - Change Suffixes to **\*.cxx**.
    - iv. Click **OK**.

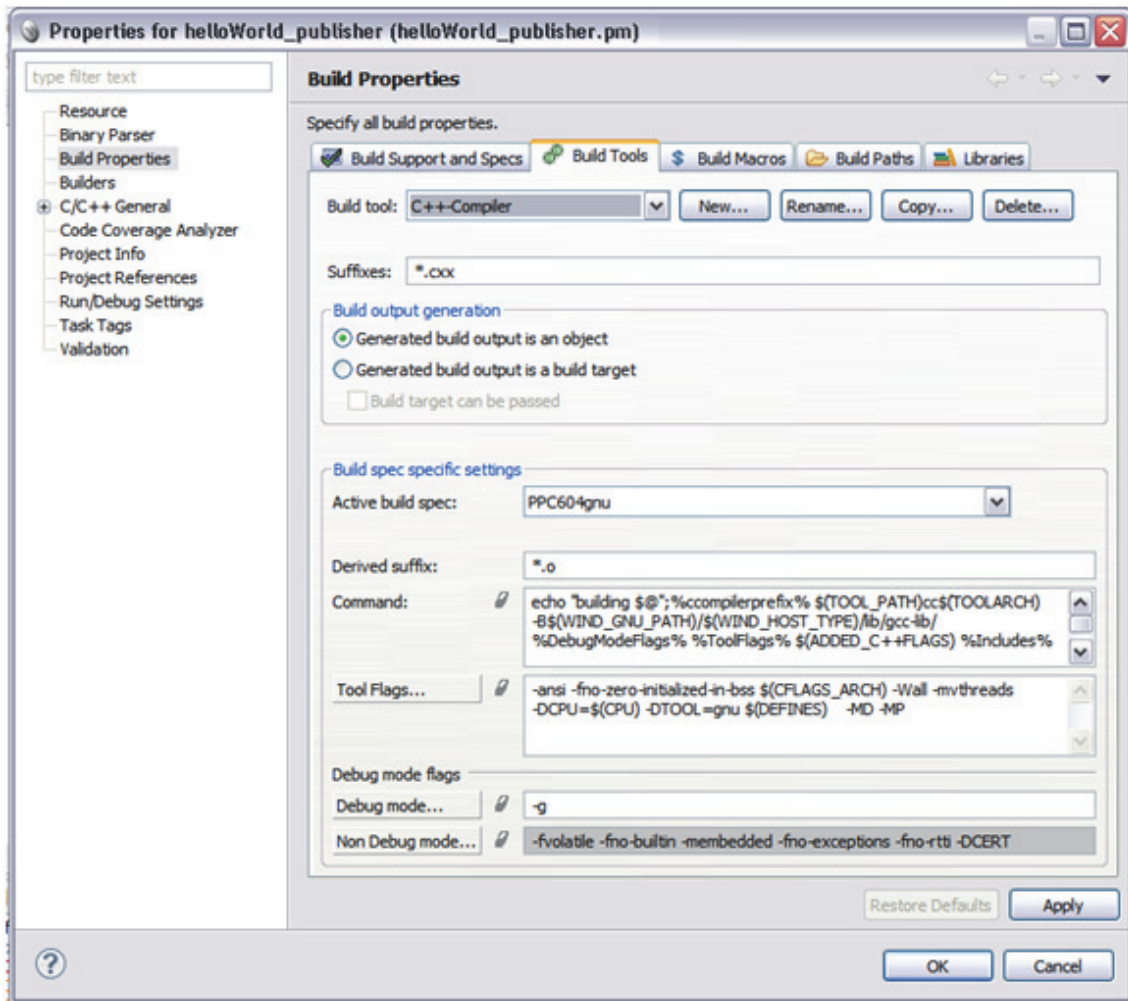


- b. For C: Right-click **helloWorld\_publisher**.  
 For C++: Right-click **helloWorld\_publisher->Build Targets->helloWorld\_publisher.pm**.
- c. Select **Properties**.


- d. In the Build Macros tab, add `-DRTI_VXWORKS -DRTI_VX653` to DEFINES.

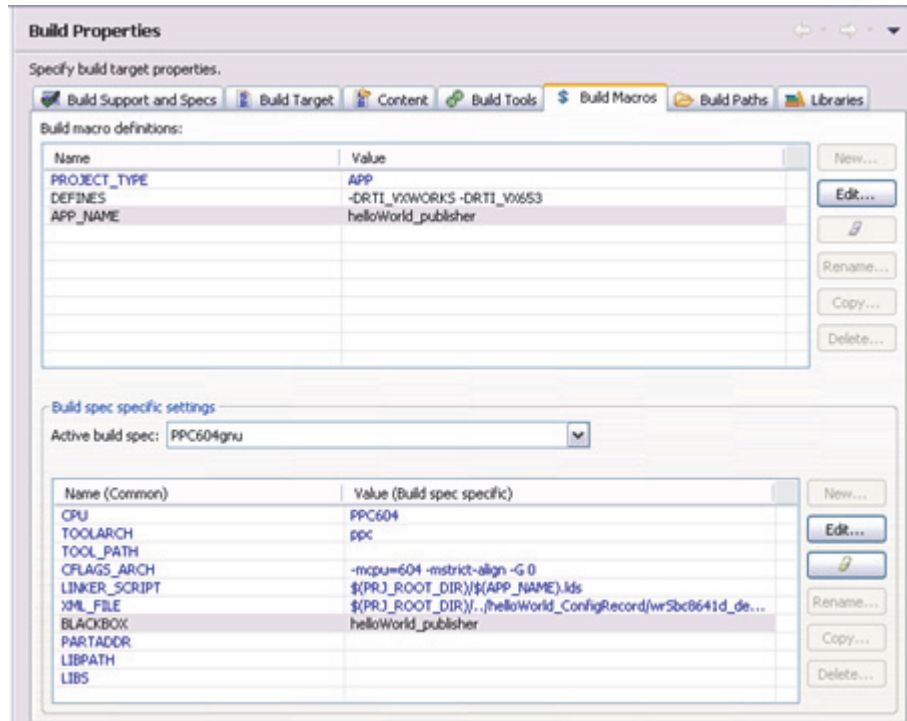

- e. In the Build Paths tab, add these Include directories:
- `-I$(WIND_BASE)/target/h`
  - `-I$(WIND_BASE)/target/config/wrSbc8641d`
  - `-I$(NDDSHOME)/include`
  - `-I$(NDDSHOME)/include/ndds`

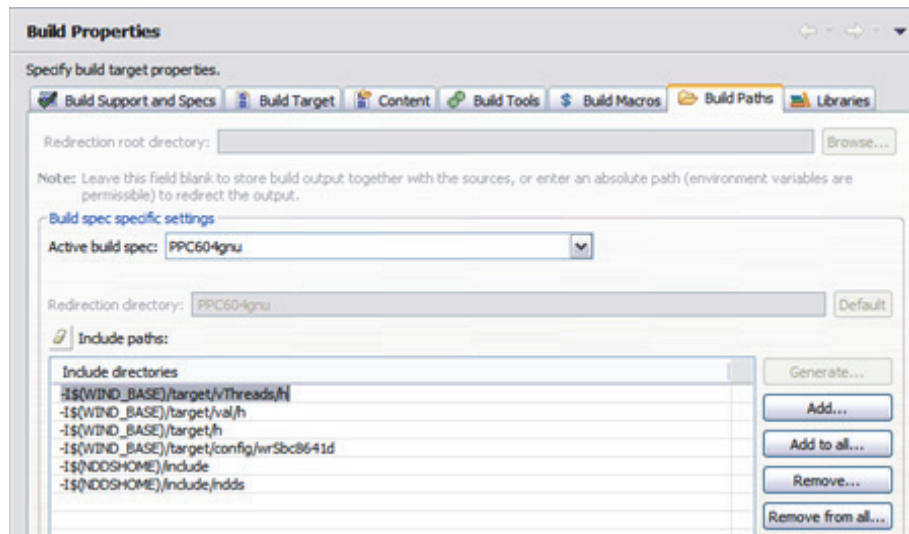

f. In the Libraries tab:

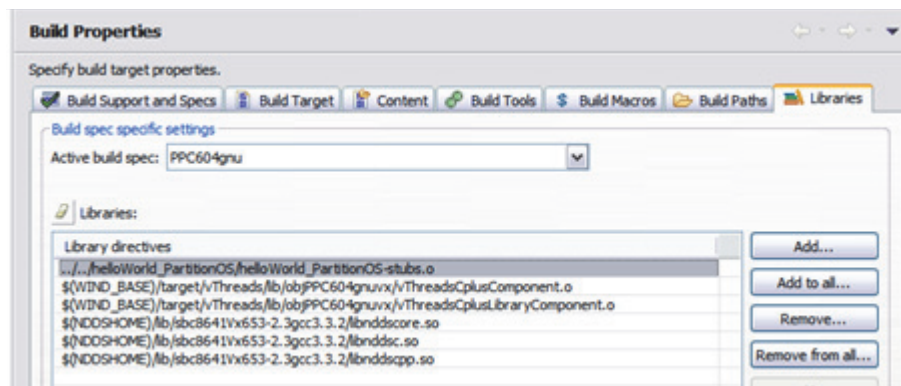

i. For C++ only, add:

(1). `$(WIND_BASE)/target/vThreads/lib/objPPC604gnuvx/vThreadsCplusComponent.o`

(2). `$(WIND_BASE)/target/vThreads/lib/objPPC604gnuvx/vThreadsCplusLibraryComponent.o`

ii. Add `$(NDDSHOME)/lib/sbc8641Vx653-2.3gcc3.3.2/libnddscore.so`

iii. Add `$(NDDSHOME)/lib/sbc8641Vx653-2.3gcc3.3.2/libnddscore.so`

- 
- iv. For C++ only:  
`$(NDDSHOME)/lib/sbc8641Vx653-2.3gcc3.3.2/libnddscpp.so`
  - g. Click OK.
  - h. Repeat the same process for helloWorld\_subscriber.
8. Build the Integration Project.
- 

## 5.3 Running DDS Applications

1. Boot up your target board with the kernel created by the Integration project.
2. If the DDS applications are in schedule 0, they will start up automatically, and you should see the publisher and subscriber communicating with each other.
3. If the DDS applications are not in schedule 0, use this command to change to the desired schedule: **arincSchedSet <Schedule number>**.